

Safety information

Do not wash large laundry items such as bedding in the washing net. Failure to do so may result in injury due to abnormal vibrations Do not use hardened detergent If it accumulates inside the washing machine, it may result in a water Make sure that the pockets of all the clothing items to be washed are Hard, sharp objects such as coins, safety pins, nails, screws, or stones

Do not wash clothing with large buckles, buttons or other heavy metal

Sort the laundry by colour on the basis of its colorfastness and sele the recommended cycle, water temperature and additional function This may result in discolouration or fabric damage. Take care that children's fingers are not caught in the door when you

Failure to do so may result in injury

Critical cleaning warnings **∴WARNING**


Do not use a strong acidic cleaning agent. Do not use benzene, thinner or alcohol to clean the appliance This may result in discolouration, deformation, damage, electric shock


Before cleaning or performing maintenance, unplug the appliance from · Failure to do so may result in electric shock or fire


Do not clean the appliance by spraying water directly onto it.

Installation

STEP 6 Position the drain hose

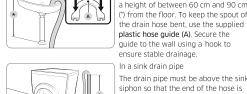

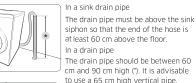

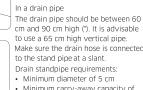

Over the edge of a wash basin

Minimum carry-away capacity of **⚠** CAUTION


stagnant water or ponding. The water may flow back to the washing machin

STEP 7 Power on Plug the power cord into a wall socket featuring an AC 220-240 V / 50

NOTE

Empty all the pockets of your laundry items Then, press **Power** to turn on the washing machine. other laundry items as well as the drum.

Instructions about the WEEE Correct Disposal of This Product (Waste Electrical & Electronic

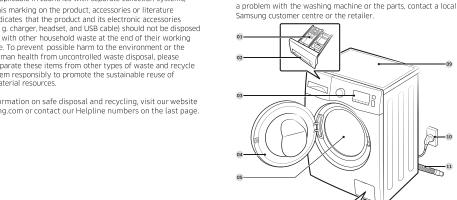

Initial settings

Run Calibration (recommended) Make sure the drum is empty before running Calibration.

4. The drum will rotate clockwise and counter-clockwise for about may become caught around the door. Place them inside a fine

5. When the cycle is complete, "0" appears on the display and the washing machine will turn off automatically. **6.** The washing machine is now ready for use.

Laundry guidelines STEP 1 Sort Sort the laundry according to these criteria

powder-type detergent into the main wash compartment. · Care Label: Sort the laundry into cottons, mixed fibres, synthetics, silk STEP 5 Determine the load capacity wools, and rayon. · Colour: Separate whites from colours. Size: Mixing different sized items together in the drum improves th

ensitivity: Wash delicate items separately for pure, new woollen s, and silk items. Check the labels on the items.

cordingly before starting the wash. STEP 2 Empty pockets

Safety information What you need to know about the safety instructions Important safety symbols Important safety precautions

Critical installation warnings Specifications Installation cautions Critical usage warnings Fabric care chart Usage cautions Protecting the environment Critical cleaning warnings Instructions about the WEEE Installation

Specification sheet Terms of Warranty

Troubleshooting

Information codes

Warranty not applicable in any of the following cases


Checkpoints

DC68-04378A-09

— English 2

Installation

What's included take sure all the parts are included in the product package. If you ha

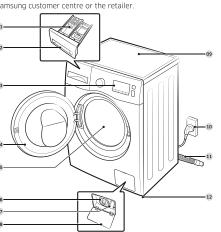

05 Drum 06 Pump filte 07 Emergency drain tube 08 Filter cover 09 Worktop

English 18

 Clothing with long strings may become entangled with other clother Make sure to tie the strings before starting the wash.

STEP 3 Use a laundry net Brassieres (machine washable) must be placed in a laundry net. Metal parts of the brassieres may break through and tear other laundry items Small, light clothing such as socks, gloves, stockings, and handkerchief

damaged. Zippers should be closed and fixed with a string.

Do not wash the laundry net by itself without other laundry. This may cause abnormal vibrations that could move the washing machine and result in injury.

soiled. When selecting the Prewash option, make sure to put

Do not overload the washing machine. Overloading may cause the

NOTE

hing bedding or bedding covers, the wash time may be engthened or the spin efficiency may be reduced. For bedding or bedding covers, the recommended maximum ycle speed is 800 rpm, and the load capacity is 2.0 kg or less.

If the laundry is unbalanced and the "Ub" information code is displayed redistribute the load. Unbalanced laundry may reduce the spinning

Spanner Bolt caps Hose guide

water hose

· Hot water hose: Applicable models only.

Before you start

contact a local water authority.

ACAUTION

NOTE

STEP 6 Apply a proper detergent type

The type of detergent depends on the type of fabric (cotton, syntheti

delicate items, wool), colour, wash temperature, and degree of soiling. Make sure to use the laundry detergent that is designed for automatic

weight of the laundry, the degree of soiling, and the hardness of the

water in your local area. If you are not sure about the water hardness

nen washing wool using the @ WOOL cycle, use only a neutral liquid

To get the best results from using laundry capsules, please follow these

1. Put the capsule in the bottom of the

2. Put the laundry in the drum on top

complete in less than one hour, it is

CAUTION

empty drum towards the rear.

Do not use detergent that tends to be hardened or solidified. This

detergent. If used with the 🛱 WOOL cycle, powder detergent may

remain on the laundry and discolour the laundry.

wise, the capsule may not dissolve completely.

• Bolt caps: The provided number (3 to 6) of bolt caps depends on the model. or service person if you are not Do not modify the provided plud

⚠WARNING · Do NOT use an extension co comes with the washing machine Improperly connected grounding Drain

and taps for any leaks.

Before you start

Wood floors may need to be

Carpeting and soft tile surface:

vibrations and may cause the

slightly during the spin cycle.

⚠ CAUTION

Do NOT install the washin

Water temperature

machine in areas where wat

may freeze as the washing

water in its water valves, pum

and/or hoses. Frozen water le

pump, and other components of

in the connection parts may

cause damage to belts, the

machine on a platform or

are not a good resistance to

Detergent drawer guidelines compartment for the main wash, the front-right for fabric softeners,



prewash detergent. 2. Main-wash compartment: Apply softener, soaking detergent, bleach, and/or stain removers 3. Softener compartment: Apply additives such as fabric softene Do not exceed the max line (A).

er while the washing machine is Do not use the following types of detergent in the drawer: Tablet or capsule types - Ball or net types

enriched agents (fabric softener or detergent) must be diluted with · When Delay End is selected, do not apply detergent directly into the drum. Otherwise, this may discolour the laundry. Use the detergent drawer when Delay End is selected. To apply washing agents to the detergent drawer

 Slide open the detergent drawer. 2. Apply laundry detergent to the main-wash compartment as instructed or recommended by

A CAUTION · Do not apply powder deterger to the liquid detergent guide. Concentrated fabric softene must be diluted with water before applied.

• Do not apply main-wash softener compartment.

safety instructions Please read this manual thoroughly to ensure that you know how to safely and efficiently operate the extensive features and functions of your new appliance. Please store the manual in a safe location close to

ongratulations on your new Samsung washing machine. This manual

contains important information on the installation, use and care of you

appliance. Please take some time to read this manual to take full

advantage of your washing machine's many benefits and features.

What you need to know about the

he appliance for future reference. Use this appliance only for its intended purpose as described in this instruction manual. Warnings and Important Safety Instructions in this manual do not cover all possible conditions and situations that may occur. It is your responsibility to use common sense, caution and care when installing, maintaining and operating your washing machine. Because the following operating instructions cover various models, the characteristics of your washing machine may differ slightly from those described in this manual and no all warning signs may be applicable. If you have any questions or concerns, contact your nearest service centre or find help and

information online at www.samsung.com. Important safety symbols

Safety information

What the icons and signs in this user manual mean: **⚠ WARNING**

Hazards or unsafe practices that may result in severe personal injury death and/or property damage

Safety information

or problems with the product.

Critical usage warnings

riangle WARNING

If the appliance is flooded, turn off the water & power supplies Do not touch the power plug with wet hands.

 Failure to do so may result in electric shock. unplug the power plug immediately and contact your nearest service

Failure to do so may result in electric shock or fire In the event of a gas leak (such as propane gas, LP gas, etc.), ventilate nmediately without touching the power plug. Do not touch the

· Do not use a ventilating fan. A spark may result in an explosion or fire Do not let children play in or on the washing machine. In addition, when disposing of the appliance, remove the washing machine door lever. If trapped inside the product, children may suffocate to death. Make sure to remove the packaging (sponge, styrofoam) attached to

the bottom of the washing machine before using it. Do not wash items contaminated with gasoline, kerosene, benzene, paint thinner, alcohol or other inflammable or explosive sub Do not open the washing machine door by force while it is operating · Water flowing out of the washing machine may result in burns or Opening the door by force may result in damage to the product Do not insert your hand under the washing machine while an operation


Installation Step-by-step installation

This may result in injury.


STEP 1 Select a location Solid, level surface without carpeting or flooring that may obstruct Away from direct sunlight

 The ambient temperature is always higher than the freezing point (0°C) STEP 2 Installation procedure for the Rat shutter assembly

with the washing machine o prevent rats from entering inside the washing machine and to avoid

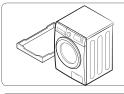

Then, remove the bottom cushion from the washing Check Point: Do not remove the shipping bolt.

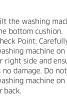

---- la la [8:88]

 Tilt the washing machine onto Check Point: Carefully tilt the washing machine on its left or right side and ensure ther is no damage. Do not tilt the vashing machine on its fron

Turn the dial to select a cycle. Selector The display shows current cycle information and 02 Display estimated time remaining, or an information code when Press to change the water temperature for the current The revolutions per minute (RPM) differs with the model

> that the laundry remains in the water. • No Spin @: The drum does not rotate after the fina • Spin Only Or To run the Spin Only cycle press Spin for 3 seconds. When the cycle time and spinning spee appear, press Spin repeatedly until a desired spinning speed is selected. Then, press Start/Pause to start th cycle. The spinning time depends on the selected cycle.

ullet Rinse Hold ullet: The final rinse process is suspended so

Press to select an option from Intensive, and Pre Wash Press again to deselect. Availability of the options depends on the cycle. Delay End lets you set the end time of the current cyc Based on your settings, the start time of the cycle wil be determined by the machine's internal logic. For example, this setting is useful for programming machine to finish a wash at the time you normally

return home from work. • Press to choose a preset unit of hours. With Bubble Soak selected, laundry is thoroughly Bubble Soak adds up to 30 minutes to the selected cyc Availability of this option depends on the cycle.

Safety information

⚠ CAUTION

Hazards or unsafe practices that may result in personal injury and/or

NOTE

property damage

These warning signs are here to prevent injury to yourself and others Please follow them explicitly.

After reading this manual, store it in a safe place for future reference. Read all instructions before using the appliance As with any equipment that uses electricity and moving parts, potential hazards exist. To safely operate this appliance, familiarize yourself with Important safety precautions

WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your appliance, follow basic precautions, including

children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

1. This appliance is not intended for use by persons (including

Do not touch the power plug with wet hands.

This may result in electric shock.

operation is in progress. and result in electric shock or fire. Do not let children or the infirm use this washing machine with proper supervision. Do not let children climb in or onto the appliance. Do not insert your hand or a metal object under the washing machine

Do not turn the appliance off by unplugging the power plug while an

the glass is broken, it may result in injury Do not unplug the appliance by pulling the power cord. Always grip After a water supply failure or when reconnecting the water supply the plug firmly and pull it straight out of the outlet Damage to the power cord may cause a short-circuit, fire and/or Open the water tap slowly after a long period of non-use Do not attempt to repair, disassemble, or modify the appliance yourse damage a product part or result in a water leak.

2. For use in Europe: This appliance can be used by

of experience and knowledge if they have been

Cleaning and user maintenance shall not be made

appliance in a safe way and understand the

by children without supervision.

persons in order to avoid a hazard.

switched on and off by the utility.

Safety information

Usage cautions

↑ CAUTION

play with the appliance.

children aged from 8 years and above and persons with

reduced physical, sensory or mental capabilities or lack

given supervision or instruction concerning use of the

hazards involved. Children shall not play with the appliance.

3. Children should be supervised to ensure that they do not

4. If the supply cord is damaged, it must be replaced by

the manufacturer, its service agent or similarly qualified

5. **CAUTION:** In order to avoid a hazard due to

inadvertent resetting of the thermal cut-out, this appliance

must not be supplied through an external switching device

6. The new hose-sets supplied with the appliance are to be

such as detergent, dirt, food waste, etc., unplug the power plug and

Failure to do so may result in discolouration, deformation, damage,

The front glass may be broken by a strong impact. Take care when

aundry or the washing machine, or result in a water leak.

by a foreign substance (e.g. waste, thread, hair, etc.).

completely closed, it may cause a water leak.

Installation

riangle WARNING

STEP 4 Adjust the levelling feet

Ensure that the screws on the water supply hose connector are

Ensure that the rubber seal and front door glass are not contaminated

f a foreign substance is caught in the door or the door is not

Open the water tap and check if the water supply hose connector

irmly tightened and that there is no water leak before using the

Packaging materials can be dangerous to children. Dispose all packaging

Gently slide the washing machine

manually adjusting the levelling

damage the levelling feet.

3. When levelling is complete.

tighten the nuts using the

Connect the water hose to the

from the water hose (B)

loosen four screws on the adaptor.

1. Remove the adaptor (A)

material (plastic bags, polystyrene, etc.) out of children's reach.

rn the water supply off when the washing machine is not being used

lean the washing machine using a damp, soft cloth.


such as a timer, or connected to a circuit that is regularly

that old hose-sets should not be used and reused.

Do not use a fuse (such as copper, steel wire, etc.) other than a ining error occurs during an operation, check if there is a · When the appliance needs to be repaired or reinstalled, contact your f the washing machine is used when it is flooded because of draining problem, it may result in electric shock or fire. • Failure to do so may result in electric shock, fire, problems with the ert the laundry into the washing machine completely so that th product, or injury. laundry does not get caught in the door. f laundry gets caught in the door, it may result in damage to the

· Failure to do so may result in electric shock or fire. periods of time or during a thunder or lightning storm Failure to do so may result in electric shock or fire foreign substance enters into the appliance, unplug the power olug and contact your nearest Samsung Customer Service . This may result in electric shock or fire.

Do not let children (or pets) play in or on your washing machine The washing machine door does not open easily from the inside and children may be seriously injured if trapped inside.

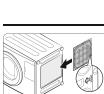

3. Fix the Rat shutter in the proper side). Check Point: Make sure th



washing machine upright.

a. Use the screws from the b. Firmly screw in the 4 screw


(Loose screws will cause noise Ensure the proper fitment. shipping bolt.

Unpack the product package and

STEP 5 Connect the water hose rided hose adaptor may differ with the model. This step guide u through connecting the connector-type adaptor ou are provided with the screw-type adaptor, go to 7.



 Loosen all shipping bolts on the rear of the machine using the supplied spanner.

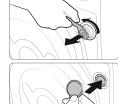



2. Fill the holes with the supplied Keep the shipping bolts for



Operations

unction helps remove a wide variety of stubbo 09 Power Press to turn on/off the washing machine 10 Start/ Press to start or stop operation

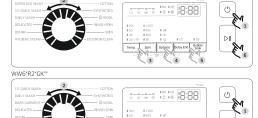

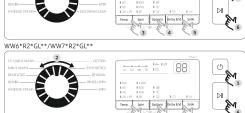

Safety information 7. This appliance is intended to be used in household only and

and it is not intended to be used such as:

bed and breakfast type environments;

kept away unless continuously supervised.

environments:

farm houses:

staff kitchen areas in shops, offices and other working

by clients in hotels, motels and other residential type

areas for communal use in blocks of flats or in launderettes.

8. For washing machines having ventilation openings in

openings must not be obstructed by a carpet.

the base, the installation instructions shall state that the

9. For use in Europe: Children of less than 3 years should be

If the screws on the water supply hose connector are loose, it may

e product you have purchased is designed for domestic use only

provided by Samsung and no responsibility can be attributed to

sing the product for business purposes qualifies as a product misuse.

ng for malfunctions or damages resulting from such misuse.

ndles, lighted cigarettes, dishes, chemicals, metal objects, etc.) on the

Do not stand on the appliance or place objects (such as laundry, lighter

his may result in electric shock, fire, problems with the product,

Do not spray volatile material such as insecticide onto the surface of

Do not place objects that generate electromagnetic fields near the

the water temperature is high before drain, it take time until the

mperature goes down, and it can be different depending on internal

not wash, spin, or dry water-proof seats, mats, or clothing (*) unless

): Woollen bedding, rain covers, fishing vests, ski pants, sleeping bags,

aper covers, sweat suits, and bicycle, motor cycle and car covers, etc

ashing machine, walls, floor, or clothing due to abnormal vibration

in the arrow direction to looser

4. Insert the adaptor into the water

5. Turn part (C) in the arrow

direction to tighten it.

tap, and tighten the screws while lifting up the adaptor.

onnect the water hose to the

adaptor. Then, release part (D

The hose fits into the adapto

7. If you are using a screw type of

water tap, use the provided

the water tap as shown.

screw-type adaptor to connect to

est top 🖨 | Extension top 🚅 | Equans top 🔏

with a clicking sound.

Do not wash throw rugs or doormats with rubber backing. The rubber

acking may come off and stick to inside the drum, and this may

Do not wash thick or hard mats even if the washing machine mark

s on the care label. This may result in injury or damage to the

esult in malfunction such as a drainage error.

This may result in injury due to a malfunction.

This may result in burns or injury.

As well as being harmful to humans, this may result in electric shock,

WARNING technician or service company.

location exposed to direct sunlight or water (rain drops). Do not install this appliance in a location exposed to low temperature Frost may cause the tubes to burst. Do not install this appliance in a location where gas may leak with the product, or injury. he appliance is heavy, therefore take care when lifting it.

lug the power cord into a wall socket that meets local electrical Do not use an electric transformer. pecifications. Use the socket for this appliance only, and do not use o not use a damaged power plug, damaged power cord, or loose wall Sharing a wall socket with other appliances using a power strip or

This may result in electric shock or fire insure that the power voltage, frequency, and current are the same Do not pull or excessively bend the power cord as those of the product specifications. Failure to do so may result in Do not hook the power cord over a metal object, place a heavy object on the power cord, insert the power cord between objects, or push the power cord into the space behind the appliance. Remove all foreign substances such as dust or water from the power

• Never plug the power cord into a socket that is not grounded correctly and make sure that it is in accordance with local and national regulation

Do not install this appliance near a heater or any inflammable material

Do not install this appliance in a humid, oily or dusty location, or in a

This appliance should be positioned in such a way that the power pluc

Failure to do so may result in electric shock or fire due to electric

This may result in spontaneous combustion or ignition due to the

Do not use natural hand-washing soap for the washing machine

If it hardens and accumulates inside the washing machine, it ma

Place socks and brassieres in a washing net and wash them with the

Do not use water from water cooling/heating devices.

 This may result in electric shock or fire. Do not pull the power cord when unplugging the power plu Plug the power plug into the wall socket so that the cord is running Unplug the power plug by holding the plug

Installation cautions

ACAUTION

If you plug the power plug into the socket in the opposite direction, the electric wires within the cable may be damaged and this may This appliance should be positioned so that the power plug, the wate supply taps, and the drain pipes are accessible. result in electric shock or fire.

Geep all packaging materials out of the reach of children as these may If a child places a bag over its head, it may suffocate. When the appliance, power plug or power cord is damaged, contact your nearest service centre.

his appliance must be properly grounded. Do not ground the appliance to a gas pipe, plastic water pipe, or telephone line. This may result in electric shock, fire, an explosion, or problems with

extending the power cord may result in electric shock or fire.

Unplug the power plug and clean it with a dry cloth.

electric shock or fire. Plug the power plug into the wall socket firr

Install your appliance on a solid, level floor that can support its weight

Safety information

Do not operate the washing machine when the detergent drawer is This may result in electric shock or injury due to a water leak Do not touch the insides of the drum during or just after drying as it

This may result in burn Also, do not allow children to play around the washing machine or his may result in burns On not insert your hand into the detergent drawer

detergent input device. The liquid detergent guide (applicable models only) is not used f powder detergent. Remove the guide when using powder deterger o not place any objects (such as shoes, food waste, animals) other han laundry into the washing machine. This may result in damage to the washing machine, or injury and

death in the case of pets due to the abnormal vibrations

This may result in injury as your hand may be caught by the


his may result in electric shock or injury Do not wash laundry contaminated by oils, creams or lotions usually und in skincare shops or massage clinics. his may cause the rubber seal to become deformed and result in a Do not leave metal objects such as safety pins, hair pins or bleach in

Oo not press the buttons using sharp objects such as pins, knifes,

This may cause the drum to rust If rust starts appearing on the surface of the drum, apply a (neutral) cleansing agent to the surface and use a sponge to clean it. Never $\,$ use a metal brush.

Do not use dry cleaning detergent directly and do not wash, rinse, or spin laundry contaminated by dry cleaning detergent.


nstallation

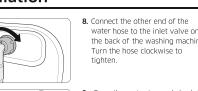

the steps above.

there are any leaks around the

Agua stop hose (applicable models only)

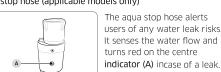

For models with an additional hot water inlet:

1. Connect the red end of

hot water inlet on the

back of the machine.

2. Connect the other end of

hot water tap.

the hot water hose to the

the hot water hose to the

NOTE The end of the agua stop hose must be fitted to the water

disconnect from the electrical supply. Then, contact a local Samsung

ot stretch the water hose by force. If the hose is too short, replace

rvice centre. Otherwise, this may cause electric shock.

connected properly by pulling the water hose downwards.

SUPER ECO WASH - Low temperature ecobubble cycle helps reduce power consumption. Options Option Description ■ Pre Wash
 • This will add a preliminary washing cycle before the main wash cycle.
 • For badly soiled laundry. The operation time for each cycle is longer than normal. Delay End (i)

3. Press Start/Pause.

You can set the washing machine to finish your wash automatically at

CLEAN	detergent or bleach applied. • Make sure the drum is empty. • Do not use any cleaning agents for cleaning the drum.	_
HYGIENE STEAM	Cotton and linen fabric which have been in direct contact with the skin, e.g. underwear. For optimum hygiene results select a temperature of 60°C or above. Steam cycles feature allergy care and bacteria elimination (sterilize).	3.0
DENIM	Featuring a higher water level in the main wash and an extra rinse cycle to ensure that no powder detergent remains.	3.0
DELICATES	For sheer fabrics, bras, lingerie (silk), and other handwash-only fabrics. For best performance, use liquid detergent.	1.5
DARK GARMENT	Featuring additional rinses and reduced spinning to ensure that the laundry is washed gently and rinsed thoroughly.	3.0
DAILY WASH	For everyday items such as underwear and shirts.	3.0
	For lightly soiled garments in loss than 2.0 kg	

2. Turn the Cycle Selector to select a cycle. 3. Change the cycle settings (Temp., and Spin) as necessary. 4. To add an option, press Options. Use the button again to choose a preferred iter

Press Start/Pause. To change the cycle during operation

Select a different cycle Cycle overview

nylon), or the like.

For blouses or shirts that are made of NTHETICS polyester (diolen, trevira), polyamide (perlon, Specific for machine-washable wool for loads • The WOOL cycle features gentle cradling and soaking to protect the wool fibres from shrinkage/distortion.

NOTE

∆WARNING

CAUTION

Operations Description & Max load (kg) Cycle Featuring an additional spin process to Cleans the drum by removing dirt and bacteria from the drum. **ECO DRUM** • Perform once every 40 washes with no

Soak and Delay End for easy access. If you want to use one of these

 Press Start/Pause to stop operation. 3. Press Start/Pause again to start the new cycle.

1. Press Power to turn on the washing machine

Cycle underwear, towels, or shirts. The washing time and the rinse count are automatically adjusted

5. The machine provides 3 respective buttons for Bubble Soak,

Standard cycles Description & Max load (kg)

For lightly soiled garments in less than 2.0 kg

big, remove the spacer ring before inserting the tap into the adapte

Cycle Description & Max load (kg) 15' QUICK • For liquid detergent, use a max of 20 ml of liquid detergent

Rinse+ • Press this button to add additional rinse cycles

 Select a cycle. Then change the cycle settings if necessary. 2. Press Delay End repeatedly until a desired end time is set. The Delay End indicator blinks and the washing machine tumbles the

4. To cancel the Delay End, restart the washing machine by pressing

later time, choosing a delay of between 1 to 24 hours (in 1 hour

ncrements). The hour displayed indicates the time the wash will finish

drum to sense the weight of the load if you have selected the COTTON cycle. Load sensing is preset and enabled only in this 1 cycl When complete, the machine displays your set time and the timer

This will add a preliminary washing cycle befor

siphon so that the end of the hose is

the care label on the clothing, and sort them

Emergency drain Recovery from freezing Care against an extended time of disuse

Contents

What's included

Before you start

Laundry guidelines

Simple steps to start

Initial settings

Operations

Control panel

Cycle overview

Maintenance

Settings

Installation requirements

Step-by-step installation

Detergent drawer guidelines

Eco drum clean 🔯 (applicable models only

Smart Check ((applicable models only)

(Applicable in countries with separate collection systems) is marking on the product, accessories or literature ndicates that the product and its electronic accessories e.g. charger, headset, and USB cable) should not be dispose of with other household waste at the end of their working ife. To prevent possible harm to the environment or the

For more information on safe disposal and recycling, visit our website ww.samsung.com or contact our Helpline numbers on the last page.

Before you start Turn clothing with buttons and embroideries inside out If trousers or jacket zippers are open while washing, the drum may be

1. Power off, and then power on the washing machine. 2. Hold down Temp. and Delay End simultaneously for 3 seconds t enter Calibration mode. The "Cb" message appears. 3. Press Start/Pause to run the Calibration cycle.

STEP 4 Prewash (if necessary)

washing machine to not wash properly. For the load capacity for the othing, see page 38.

⚠ CAUTION

Installation nstallation requirements

circuit breaker is required.

Electrical supply and grounding Water supply

3 English —

Use an individual branch circuit kPa and 800 kPa. Water pressu specific to the washing machine. less than 50 kPa may cause the To ensure proper grounding, the power cord featuring a threeprong grounding plug for use in

Turn off the taps when the qualified electrician to install a Check for any leaks at the wate

A CAUTION to plastic plumbing, gas lines, connections at the water valve

in height of 60-90 cm. The drain the hose clip to the standpipe

Or, it may take longer to fill the

must be within 120 cm from the

Make sure water taps are easily

drum, causing the washing

To reduce the risk of leaks

1. I Prewash compartment: Apply

prewash detergent to the prewash compartment as instructed or recommended

3. Apply fabric softener to the 🏶

softener compartment
Do not exceed the max line (A).

Softener is dispensed into the

wash during the final rinse.

Alcove installation

If both the washing machine and

location, the front of the alcove

unobstructed air opening. Your

equire a specific air opening.

ashing machine alone does no

5. Close the detergent drawer

Temp. Spin Options Delay End Solk ----- ie-ie 18:88

Operations

WW6*R2*EK**/WW7*R2*E

Control panel

03 - 04 - ∞ 05 - ∞ 06 08

O3_+0_O4_+20_O5 O6 O8

Bubble Soak helps remove a variety of stubborn stai

Simple steps to start

applying fabric softener to the laundry.

that you want to wash quickly.

• Use less than 20 g of detergent. U Use less than 20 g of detergent. Using more than 20 g of detergent may leave detergent

Operations

Real-life case

want to finish a two-hour cycle 3 hours later from now. For this you add the Delay End option to the current cycle with the 3-hour setting, and press Start/Pause at 2:00 p.m. Then, what happens? The washing machine starts operating at 3:00 p.m., and ends at 5:00

p.m. Provided below is the time line for this example

Child Lock 🗓

hold down Temp, and Spin imultaneously for 3 seconds. To release the Child Lock

Spin simultaneously for 3

NOTE

Child Lock locks all buttons except

after restarting the machine.

You can turn on or off the sound

Do not use any cleaning agents for cleaning the drum. Chemical residue in the drum may cause damage to the laundry or the drum of the To prevent limescale, add the proper amount of detergent according to Your setting will be kept ur local water hardness or add a water softener additive together with

. To mute the sound, hold down Spin and Options simultane • To unmute the sound, hold down

ECO DRUM CLEAN reminder • The ECO DRUM CLEAN reminder appears on the main screen or every 40 washes. It is advisable to perform the ECO DRUM CLEAN

Maintenance

Keep the washing machine clean to prevent deteriorated performance

Perform this cycle regularly to clean the drum by removing bacteria fron This cycle heats the water between 60°C and 70°C, and it also removes

When you first see this reminder, you can ignore the reminder for 6

consecutive washes. From the 7th wash, the reminder no longer

appears. However, it appears again on the next 40th wash

Eco drum clean 📵 (applicable models only)

accumulated dirt from the rubber door gasket.

CAUTION

1. Press Power to turn on the washing machine

2. Turn the Cycle Selector to select ECO DRUM CLEAN.

again for 3 seconds.

 In the Child Lock state, you must first release the Child Lock if you want to add detergent or laundry Your setting will be kept even

Troubleshooting Information codes

If the washing machine fails to operate, you may see an information code on the screen. Check the table below and try the suggestions.			
Code Action			
4C	Water is not supplied. • Make sure the water taps are open. • Make sure the water hoses are not clogged. • Make sure the water taps are not frozen. • Make sure the washing machine is operating with sufficient water pressure. • Make sure that the cold water tap and the hot water tap are properly connected. • Clean the mesh filter as it may be clogged.		
4C2	Make sure the cold water supply hose is firmly connected to the cold water tap. If it is connected to the hot water tap, the laundry may be deformed with some cycles.		
	Water is not draining. • Make sure the drain hose is not frozen or clogged. • Make sure the drain hose is positioned correctly,		

depending on the connection type Clean the debris filter as it may be clogged Make sure the drain hose is straightened all the way to the drain system. · If the information code remains, contact a customer Operating the washer with the door ope dC • Make sure the door is properly closed. Make sure laundry is not caught in the door Water has overflowed.
 Restart after spinning.

contact a local Samsung service centre

· Make sure the end of the drain hose is placed on the flo LC, LC1 • Make sure the drain hose is not clogged. If the information code remains, contact a customer Make sure laundry is spread out evenly. Make sure the washing machine is on a flat, stable surface Redistribute the load. If only one item of clothing needs washing, such as a bathrobe or pair of jeans, the final result might be unsatisfactory, and an "Ub" check Check the motor for operation. Try restarting the cycle. If the information code remains, contact a customer service centre. The electronic control needs to be checked. Check if power is supplied properly. If the information code remains, contact a customer Low voltage detected. Check if the power cord is plugged in. If the information code remains, contact a customer gh temperature heating check. If the information code remains, contact a customer Turn the machine off, and restart the cycle. If the information code remains, contact a customer If the information code remains on the display.

Warranty not applicable in any of the following cases

Terms of Warranty (Only Applicable to India)

1. The Complete warranty Card is not presented to the service engineer at the time of repairs being undertaken/ requested.

2. The Product is not purchased from an Authorized Samsung Sales Dealer.

INSTRUCTION MANUAL as determined by company personnel.

4. Defect Caused by improper use, as determined by the authorized service centers/ Company Personnel.

5. Modification or alterations of any nature mode in the circuitry by the Purchaser or unauthorized Personnel, as determined by Company personnel.

6. The Warranty is not applicable if the washing machine used for commercial purpose or Public places like Hotels, training centers and other similar applications.

7. The Original Serial number is removed, obliterated or altered from the Product.

8. Defect due to causes beyond control like lightening, abnormal voltage, acts of god or while in transit to service center or to the purchaser residence.

Adjustment of Tap adopter.

10. Noise or Vibration that is considered as normal for example water drain sound, spin

11. Removal of foreign objects/substances from machine, including the Drain Valve and inlet hose filter for example coin, Grit, safety pin, buttons, hooks, Dirt accumulation etc.

For warranty conditions refer warranty card.

(applicable models only).

Smart Check 🔯 (applicable models only)

The Smart Check function has been optimized for Galaxy & iPhone

displays an information code if a problem is detected.

3. Run the Samsung Smart Washer app on your mobile device, and tap

4. Put the mobile device close to the washing machine's display so that

5. When the information code is recognized correctly, the app provides

etailed information about the problem with applicable solutions.

The function name, Smart Check, may differ depending on the language.

Then, the information code will be recognized automatically

• If there is strong reflected light on the washing machine display,

• If the app fails to recognize the Smart Check code consecutively, enter

the app may fail to recognize the information code.

the information code manually onto the app screen.


Troubleshooting

Nasher app at the Play Store or the App Store, and install it on a mobile device featuring a camera function.



Maintenance

electrical outlet. 2. Open the filter cover (A) by using

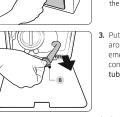

around the cover, and stretch the container while holding the tube cap (B).

in the emergency drain tube (C) 5. When done, close the tube cap, and reinsert the tube. Then, close the filter cover.

NOTE

the water in the drum may be more than expected.

Fabric care chart

Action Turn the machine off, and restart the cycle. Turn the macrime on, and reader the system
If the information code remains, contact a customer service centre.

reduce laur	idry problems.		
\square	Resistant material	$ \boxtimes $	Do not iron
\Box	Delicate fabric	A	Can be dry cleaned using any solvent
95 95	Item can be washed at 95°C	0	Dry clean
(M) (M)	Item can be washed at 60°C	P	Dry clean with perchloride, lighter fu pure alcohol or R113 only
40/40/	Item can be washed at 40°C	F	Dry clean with aviation fuel, pure alcohol or R113 only
30 30	Item can be washed at 30°C	\otimes	Do not dry clean
Ŵ	Hand wash only		Dry flat
\bowtie	Dry clean only		Can be hung to dry
<u></u>	Can be bleached in cold water		Dry on clothes hange
A	Do not bleach	\odot	Tumble dry, normal he
<u></u>	Can be ironed at 200°C max	0	Tumble dry, reduced he
<u></u>	Can be ironed at 150°C max		Do not tumble dry
\overline{a}	Can be ironed at 100°C max		

oning (and dry cleaning when necessary). The use of symbols ensur

Specifications

include four symbols in this order: washing, bleaching, drying and

AC6	Check communications between the main and the inverter PBAs. Depending on the state, the machine may automatically returns to normal operation. Turn the machine off, and restart the cycle. If the information code remains, contact a local Samsung service centre.			
ny information code keeps appearing on the screen, contact a local				

Samsung service ce

water onto the washing machine.

Emergency drain


case of a power failure, drain the water inside the drum before Surface of the washing machine





Maintenance

Pump filter

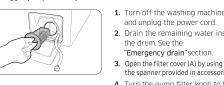

1. Turn off the washing machin 2 Drain the remaining water insidence.



6. Reinsert the pump filter, and NOTE information code of "5C"

A CAUTION

 Make sure the filter knob is properly after cleaning the filte Otherwise, this may cause a leak Make sure the filter is inserted properly after cleaning it.

Maintenance

While holding down the release

. Remove the release lever an


slide open the drawer.

Recovery from freezing

5. Reconnect the water hose to the water tap.

Care against an extended time of disuse

shing machine may freeze when it drops below 0°C . Turn off the washing machine, and unplug the power cord 2. Pour warm water over the water tap to loosen the water hose. Disconnect the water hose, and soak it in warm water.

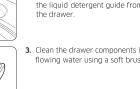

NOTE 3. Clean the drawer components in If the washing machine still doesn't operate normally, repeat the above flowing water using a soft brush. steps until it operates normally.



Detergent drawer

NOTE gent, perform the RINSE+SPIN cycle with the drum being empty.

the liquid detergent guide to the 6. Slide the drawer inward to close Open the door to let air circulate through the drum.

1. Turn the Cycle Selector to select RINSE+SPIN. Empty the drum, and press Start/Pause. 3. When the cycle is complete, close the water tap and disconnect the

Avoid leaving the washing machine unused for an extended time.

4. Turn off the washing machine, and unplug the power cord

Troubleshooting Checkpoints

f you encounter a problem with the washing machine, first check the

Make sure the washing machine is plugged

Make sure the door is properly closed

Make sure the water taps are open.

Check the fuse or reset the circuit b

· Make sure the door is properly closed

insufficient, • Make sure the water supply hose is not froz

selector is in the upper position.

other object.

oes not • Make sure Child Lock 🖨 is not activated.

does a quick drain

Action

Press or tan Start/Pause to start the washing machi

Refore the washing machine starts to fill, it will make

a series of clicking noises to check the door lock an

· Make sure the water supply hose is not kinked or clogge

Make sure the washing machine is running with suffice

Make sure the detergent is added to the centre of the

nove the rinse cap and clean the detergent drawer.

Make sure the washing machine is installed on a lev

Make sure the washing machine is not contacting any

use the levelling feet to adjust the height of the washi

Make sure the rinse cap is inserted properly

Make sure the shipping bolts are removed.

table below and try the suggestions

Problem	Action
	Make sure the laundry load is balanced.
	The motor can cause noise during normal o
	Overalls or metal-decorated clothes can cau
	l

while being washed. This is normal Metal objects such as coins can cause noise

the drain system. If you encounter a drain restriction call for service.

 Make sure the debris filter is not cloqued. lose the door and press or tap Start/Pause For your safety, the washing machine will not tumb or spin unless the door is closed. Make sure the drain hose is not frozen or clogged.

that is not clogged. or spin. As soon as the washing machine regains ufficient power, it will operate normally.

The door will not open until 3 minutes after the wash machine has stopped or the power turned off. Make sure all the water in the drum is drained. The door may not open if water remains in the drun Drain the drum and open the door manually Make sure the door lock light is off. The door lock light turns off after the washing machine has drained

detergent as appropriate. ause noise Use high efficiency (HE) detergent to prevent · Reduce the detergent amount for soft water, small loads After washing, remove these objects from the drum of or lightly soiled loads. Non-HE detergent is not reco Make sure the drain hose is straightened all the way to Make sure the remaining amount of detergent and fabric softener is not over the limit. Check the fuse or reset the circuit breaker. Close the door and press Start/Pause to start the Make sure the drain hose is connected to a drain will not tumble or spin unless the door is closed. If the washing machine is not supplied with sufficien a series of clicking noises to check the door lock power, the washing machine temporarily will not drain and does a quick drain. There may be a pause or soak period in the cycle. Wait briefly and the washing machine may start Make sure the mesh filter of the water supply hose at · Press or tap Start/Pause to stop the washing machin the water taps is not clogged. Periodically clean the to disengage. If the washing machine is not supplied with sufficien power, the washing machine temporarily will not drain or spin. As soon as the washing machine regains

 Fully open both taps Make sure the temperature selection is correct. • Make sure the hoses are connected to the correct taps. Flush water lines.

Troubleshooting

Make sure you use the recommended types of

Bubbleshot ondels only).

• Severely contaminated laundry may not generate bubb em persists, contact a local Samsung service centre.

Clean the door seal (diaphragm).

120°F (49°C) hot water at the tap. Also, check the water

connect the hoses and clean the mesh filte

may change as the automatic temperature control

and/or just cold water going through the dispenser

Use high efficiency (HE) detergent to reduce over

Make sure the drain hose is not kinked or clogged.

Use high efficiency (HE) detergent to prevent oversudsi
Excessive suds collect in recesses and can cause foul odor

• Dry the washing machine interior after a cycle has finished

become unbalanced and not spin completely.

Make sure the end of the drain hose is correctly

inserted and secured to the drain system.

Run cleansing cycles to sanitize periodically.

Make sure the door is properly close

While the washing machine fills, the water temperatur

checks incoming water temperature. This is normal.

While the washing machine fills, you may notice just

This is a normal function of the automatic temperat

Load is too small. Small loads (one or two items) may

control feature as the washing machine determines the

he mesh filter may be clogged.

water temperature.

SAMSUNG

Warranty shall be void if product has failed under certain conditions/types (ex: water logging, misuse, etc.)

15 Months from date of purchase or 12 months from installation, whichever ends early. **12 Months from date of commissioning n case of parts warranty, labour cost and gas charging cost(if applicable) will be chargeable as per the applicable rates.

Correct disposal of the product (Waste Electrical & Electronic Equipment) This marking on the product, accessories or literature indicates that the electronic accessories (e.g. charger, headset, and USB cable) should not be dispose with other household waste at the end of their working life.

mentioned in the instruction manual of the product.

Warranty does not cover repair due to external factors/mediums/data types.

For more information on safe disposal and recycling visit our website or contact number. SAMSUNG INDIA ELECTRONICS PRIVATE LIMITED Registered Address:6th Floor,DLF Centre, Sansad Marg,New Delhi-110001,Visit: www. samsung.com/in Samsung Helpline - Call : 1800 40 7267864 (1800 40 SAMSUNG) / 1800 5 7267864 (1800 5 SAMSUNG)

QUESTIONS OR COMMENTS? OR VISIT US ONLINE AT

This product is RoHS compliant

3. The Product purchased is not used according to the instruction given in the

9. Correcting the installation for example leveling the product, adjustment of drain hose,

sound or warning beeps.

12. Replace fuse, correcting house wiring, house plumbing and defect or damage caused by household pets, rats, cockroaches or any other animals or insects.

ne purchase price of the product.

ealer Name & Address :__

ustomer's Signature & Date accept the Terms & Conditions of warranty) 58 English -

irns to normal operation.				
n the machine off, and restart the cycle.	\Box	Delicate fabric	A	Can be dry cleaned using any solvent
e information code remains, contact a local Samsung vice centre.	95 95	Item can be washed at 95°C	0	Dry clean
code keeps appearing on the screen, contact a local entre.	₩ <u>₩</u>	Item can be washed at 60°C	P	Dry clean with perchloride, lighter pure alcohol or R1 only
	40/ 40/	Item can be washed at 40°C	F	Dry clean with avia fuel, pure alcohol o R113 only
	30 30	Item can be washed at 30°C	\otimes	Do not dry clean
	W	Hand wash only		Dry flat
	\bowtie	Dry clean only	III	Can be hung to dry
	\alpha	Can be bleached in	M	Dry on clothes han



This warranty card gives the key points related to warranty claim. for further details log on to

Warranty Card (Only Applicable to India) Proof of purchase is a pre-requisite to claim warranty.

The product should have been purchased from an authorised Samsung Sales Dealer in India. Warranty can be claimed only if the repair was carried out by the Samsung authorised service center. Carry-in service or In-Home service applicability depends on the product category and Samsung policy. Free installation or demo of the product, if applicable, can be availed only once and within 6month from the date of purchase. In case

of installation, any additional material required over and above the standard installation kit shall be on the chargeable basis

In case of defective accessory, only the accessory will be repaired or replaced. Cosmetic/ Aesthetic / Plastic / Glass Parts /Bulbs / Cable /Wiring / Piping/ Consumables are not covered under warranty. The defective parts/ products which were replaced by Samsung under this warranty shall be the property of Samsung. While carrying out repair, Samsung may use accessories or parts that are new or refurbished or recondit

1. Samsung shall be free to decide on whether or not to provide a software update for its products. 2. Samsung shall not be responsible for any loss or misuse of data, personal information, setting, third party software during product usage or repair or software update. 3. Samsung shall not be liable for any loss, cost, expense, inconvenience or damage that may result from use inability to use the

D. Samsung shall not be liable for any losses or consequential losses due to product failure or the installed software.

6. Usage of power stabilizers of proper rating is necessary unless explicitly mentioned by Samsung on product 17. In case of defect arising out of installation done by party other than Samsung authorised party, the limited warranty will be applicable as per revised T&C as Samsung shall deem fit.

Regular upkeep, maintenance and cleaning of parts are necessary in certain products. Such periodic maintenance shall be or chargeable basis unless otherwise provided and not covered under warranty. 9. In the event of any unforeseen circumstances, and spares not being available Samsung's prevailing depreciation rules will b binding on the purchaser and same shall be considered as a commercial solution in lieu of repairs. O Defects arising out of the following are not covered under warranty like Mishandling/Misuse Improper ventilation. Improper

voltage, Use of external material, Normal wear and tear, Physical damage and / or electrical damage caused by physical impact. 21. Complaints related to playability, printability, compatibility with external accessories, software, file systems, third party applications, CODEs, signals, Networks& ISP bandwidth shall not be considered as defect in product and not covered unde

26. No warranty on certain parts/conditions/types of product failures.

4. Defects caused by customer negligence, tampering shall void the product warranty.

5. Any extended/addition warranty offered by Samsung has to be supported by relevant proofs.

2. This warranty covers only the defects in products arising out of manufacturing or faulty workmanship. 3. This warranty covers repair/replacement of parts. 24. Warranty period of parts & accessories may vary from product to product. 25. Maximum liability out of this warranty is limited to the product purchase value/MRP.

27. Order certain conditions where warranty obligations cannot be met, depreciat	tion will be applicable on the existing product.	
CUSTOMER DETAILS CUM WARRANTY CARD		
Model No:	Customer copy (to be retained by customer):	
Product Serial No: Date of Purchase: Name:		
Address in Full:		
Telephone No.: Model No:		

1. When the washing machine detects an issue to check, an information hold **Options** and **Delay End** simultaneously for 3 seconds. 2. The washing machine starts the self-diagnosis procedure and

4. Use pliers to pull out the mesh filter from the inlet valve. Submerge the mesh filter deeply

connector is also submerged. 7. Reinsert the mesh filter into the

inlet valve, and reconnect the water hose to the inlet valve. 8. Open the water tap. If the mesh filter is clogged, an information code of "4C"

appears on the screen.

1. Turn off the washing machine

and unplug the power cord.

hose from the back of the

revent water from gushing ou

water so that the threaded

2. Close the water tap.

operational failure or a leak. Protecting the environment

onsistency among garment manufacturers of domestic and imported tain removal products and bleaches before the wash cycle only when strictly ary. vater and electricity by only washing full loads (the exact amount depends Specification sheet sterisk(s) means variant model and can be varied (0-9) or (A-z Spin revolutions

6.0~6.5 KG – The Program is "COTTON 60°C + Intensi
 7.0 KG – The Program is "COTTON Cold + Intensive

(Only Applicable to India)

The Warranty shall be null and void in any of the following cases, and in such cases Samsung may at its sole discretion repair the equipment on a chargeable basis. The decision of Samsung, whether a complaint falls in any of these categories or not shall be binding on the Purchaser. The dully filled warranty card/proof of purchase is not presented to the service engineer at the time of repairs being

The original serial number of the product is removed, altered or obliterated from the product The product purchased is not used as per the rated power conditions or instructions mentioned in the INSTRUCTION MANUAL. The product is being used for commercial purpose OR if the product has been used excessively and beyond reasonable

Site (premises where the product is used/ kept) conditions that do not conform to the recommended operations of the produ Defects caused due to exposure to moisture/dampne extreme thermal or environmental conditions or rapid changes in sucl of conditions/corrosions/oxidations/spilling of food/liquid/influence of Chemical substances.

Defects due to causes beyond control like lightning, abnormal voltage, spikes, external sources (ex: cable/set top box connections), fire, water logging, natural calamities, commotion, riots, theft, anti-social action, acts of God or while in transit. Defects caused by household pets, rats, cockroaches, ants, pests, fungi or any other animal/birds/insects. Defects caused due to negligence/omission of the Purchaser on account of periodic maintenance(s)/periodic servicing as

Defects caused due to usage of third party material/non Samsung Authorized Consumables. Any modifications, including but not limited to, rooting attempts, reverse engineering, unlocking, jail-breaking etc. of the original firmware(s) or software(s) of the product. Repair due to misuse/third party repair attempts are not covered in warranty.

Warranty shall apply only if the product is used as per its usage specifications (ex: personal, commercial etc.)

All disputes arising out of this warranty are subject to Delhi jurisdiction only. */arranty period commences from the date of purchase of the product unless specified otherwise.			
Product Group	ct Group Product Description	Warranty Period (Months)	Parts/Accessory Warranty(if applicable)
	Semi Automatic	24	Wash Motor : 60 months on Semi Automatic Wash Motor *
	Rear control panel Top Loading Fully Automatic	24	AC Motor : 120 months * Digital Inverter Motor : 240 months *
Washing Machine	g Machine Front control panel Top Loading Fully	24	(Applicable for Rear & Front Control Panel models with Wobble Pulsato

COUNTRY	CALL	OR VISIT US UNLINE AT
INDIA	1800 40 7267864 (1800 40 SAMSUNG) (Toll-Free) 1800 5 7267864 (1800 5 SAMSUNG) (Toll-Free)	www.samsung.com/in/support
NEPAL	16600172667 (Toll Free for NTC Only) 9801572667	www.samsung.com/in/support
BANGLADESH	09612300300 08000300300 (Toll free)	www.samsung.com/in/support